

## Pilots!

Please, pay attention to the critical spot during taxi along the construction site – NOTAM A1120/19.  
Use Intermediate Holding Points to secure safe distance from preceding traffic.

Avoid risk of wingtip collision  !

A1120/19

A) LKPR

B) 1909020600 C) 1912061500

E) TWY B BTN TWY G AND TWY H CLSD.


TWY B2 BTN TWY B AND STAND 10 CLSD.

TWY H BTN TWY B1 AND STAND 50 CLSD.

TWY Z BTN TWY B1 AND TWY H CLSD.

POSITION PUSH 3 AND 4 ON TWY B2 CLSD.

DAY AND NGT MARKING. WIP

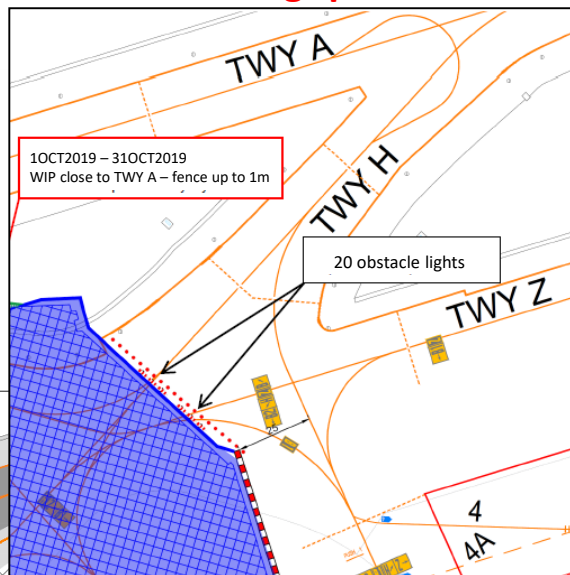

Taxiing via TWY A to TWY H  
and vice versa restricted by  
maximum wingspan of  
**36 m!**

